

Thank you for choosing the Inrico two way radio

**USER'S MANUAL**

**T320**

**Inrico®**

**Inrico 中瑞科®**

**T320**

**使用说明书**

感谢您选购中瑞科对讲机.

 
### 使用前须知：

 
- 请勿在易爆环境（如煤气、尘埃、蒸汽等）下使用对讲机或对电池充电；
- 在加油或停车于加油站时，请关闭对讲机；
- 不论有任何理由都不可改装或调整本机；
- 请勿让对讲机受到长时间的阳光直射，也不要将它放在加热器具附近；
- 请勿将对讲机放在极度多尘、潮湿及水溅之处，也不要将它放在不平稳的表面上；
- 维修仅可由专业技术人员进行，请勿自行拆装。

### 安全性：

请仔细阅读上面内容，使用者对使用对讲机的一般危险性的了解和认识是很重要的。


## 熟悉本机

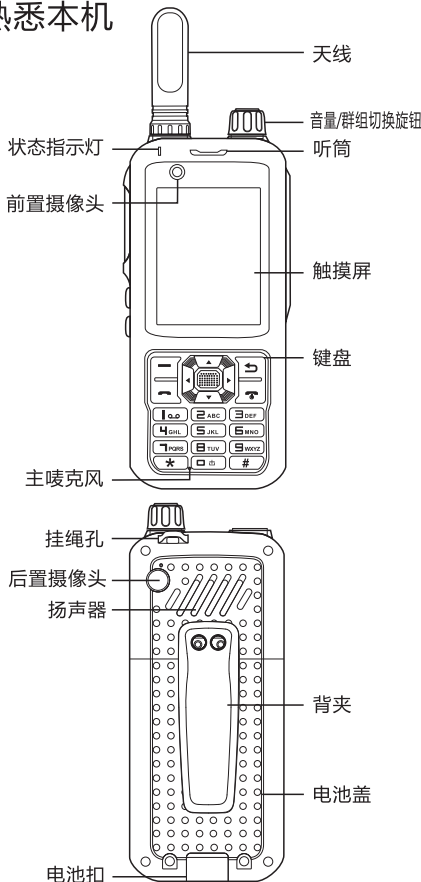

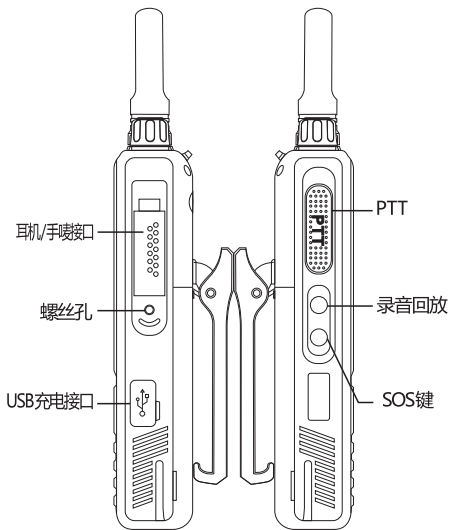


## 配件安装
 
### ① 插入SIM卡

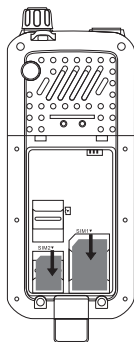


### ② 插入microSD卡

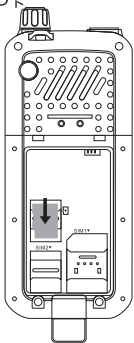 


### 3 安装电池

 - (a) 将带有金属触点的一端插入电池槽底部
- (b) 向下按压电池另一端

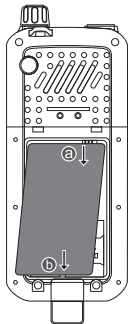


- ### 4 密合电池盖：(a) 向上推入电池盖插孔； (b) 向下压下电池盖； (c) 扣上电池锁扣。

 打开电池盖：翻下电池扣，打开电池盖

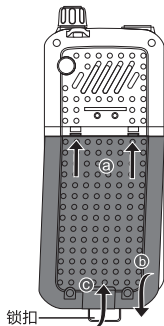


### 5 安装背夹：

 
- (a) 背夹对准卡槽定位
  - (b) 对准机子背后螺丝孔旋转螺丝安装
- 卸下背夹：依次旋转螺丝扭松可将背扣取下。

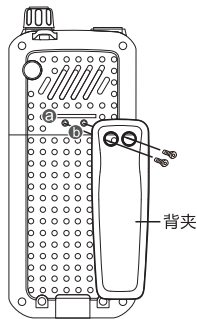


### 6 安装吊绳

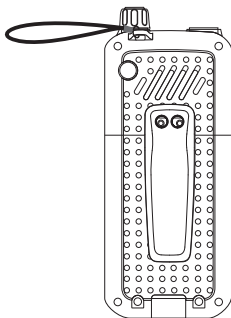 

 - 7 拆卸手咪盖：先将螺丝扭松端口，由下轻松拆卸手咪盖  
合上手咪盖：先将手咪端口对准卡槽，用力将螺丝孔压紧，扭动螺丝，直到卡紧为止。

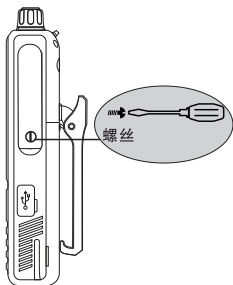

 - 8 安装天线：按顺时针方向将天线旋入,直到到旋紧为止  
卸下天线：按逆时针方向将天线旋出。  
(注切勿将钥匙串等挂在天线上,这样拿用会损坏天线并降低对讲的性能。)

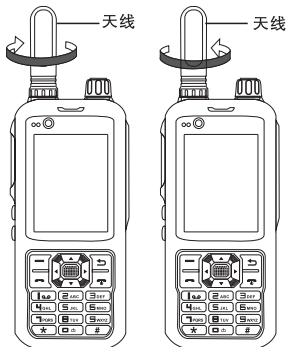

## 基本功能


### 首次开机

确保电池已安装好。开机：按住挂机键按钮，直至显示屏出现开机的画面。某些SIM卡会有PIN码保护。如果有输入PIN码提示，输入你的PIN码。PIN码的初始密码一般为1234。

### 屏幕解锁

短按挂机键锁定屏幕，再次短按电挂机键唤醒屏幕，向任意方向滑动解锁图标，屏幕解锁进入待机界面。

### 系统提示栏

打开提示栏的方法：用手指按住屏幕顶端的状态栏，拽住弹出的下拉框向下拖动，即可打开提示栏。系统提示栏显示当前开启的应用程序，点击正在运行的列表栏，可快速切换到相对应的应用程序。友情提示：开启飞行模式后，无法拨打电话。此外，系统提示栏还会显示系统当前的通知（如未读短信、未接电话等），以及正在运行的应用程序。点击  图标，可查看图标列表，点击可快速开启相应功能。

### 个性化设置

在主屏幕的空白地方长按可进入个性化设置界面。在个性化设置界面，可以设置壁纸，添加小部件，以及进行系统设置。

### 图标的移动删除

长按屏幕中的菜单或小部件图标，可进行相应图标的移动或删除操作。

### 恢复出厂设置

在设置菜单中选择“备份和重置”可进行恢复出厂设置。

警告：恢复出厂设置会将手机重设为其初始出厂状态，即清除系统、应用程序数据及设置，还包括下载的应用程序。

# 功能介绍

## 拨号

拨打电话，按拨号键可让您快速访问通话记录、数字拨号键盘、通话设置。

## 联系人

可让您轻松地给朋友和同事打电话，发送电子邮件或发短信。您可以直接在手机上添加联系人，或者从电脑上的应用程序同步通讯录。

## 信息

点击进入信息界面，将显示接收到的信息列表，可以进行编辑、发送、删除信息等操作。

 
## 日历

可让您随时访问您的日历和事件。您可以分别查看日历，也可以同时查看若干个日历。进入顶部选项是按日、周、月方式查看，开启以周（月）查看，显示的日历将以周（月）的方式呈现，更方便您查看日程表和新增事项

## 设置

进入菜单根据需要对对讲机进行个性化设置。包括无线网络、情景模式、显示、存储、电池、应用、位置信息、安全、语言和输入法、备份和重置、添加账户、日期和时间、辅助功能、打印、开发者选项、关于手机等。

## 按键说明：

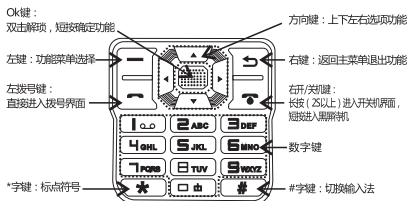

## 视频

可以观看录制或下载到对讲机中的视频文件，以及对视频文件进行修改、分享等操作。

## 图库

可以浏览查看对讲机中存储的图片、照片、视频文件，也可点击拍照图标快速进入拍照界面。

## 文件管理

可对存储在手机本地或存储卡上的文件进行查看和管理。

## 相机

照、录像，可对相机进行诸如曝光、色彩效果、取景模式、人脸识别、连拍等多种设置，根据个人喜好或拍摄环境等进行相关设置，已达最佳拍摄效果，还可以查看拍摄的照片或录制的录像。

## 计算器

可进行简单四则运算，以及多种数学运算。

## 音乐

点击进入音乐列表界面，为您提供艺术家、专辑、歌曲和播放列表四种音乐排列模式选择。点击音乐名称直接进入音乐播放界面。

## 对讲

输入账号/密码登陆①

①详细登录方式见注-《公网对讲使用说明书》）

# 安全信息

在使用操作设备前,请阅读并遵守下面的注意事项,以确保设备性能最佳,并避免出现危险或非法情况。

## 电子设备

有文明规定禁止使用无线设备的场所,请勿使用设备,否则会干扰其他电子设备或导致其他危险。

## 易燃易爆区域

- 在加油站(维修站)或靠近易燃易爆物品、化学剂等任何易燃易爆区域,请勿使用并设备,设备可能引起爆炸或起火。

## 操作环境

- 请勿在多灰、潮湿、肮脏或靠近磁场的地方使用设备,以免引起设备内部电路故障。
- 请勿在雷雨天气使用本设备,雷雨天气可能导致设备故障或电击危险。
- 请勿将设备放置在阳光直射的地方过久。
- 请避免设备及其配件雨淋或受潮,否则可能导致火灾或触电的危险。
- 请勿将设备靠近热源或裸露的火源,如电暖器、微波炉、烤箱、热水器、炉火、蜡烛或者其他可能产生高温的地方。

## 配件要求

- 勿使用未经认可或不兼容的电源、充电器或电池,可能引发火灾、爆炸或其他危险。
- 只能使用设备制造厂认可且与此型号设备配套的配件,如果使用其他类型的配件,及引发意外损坏设备,违反本设备的保修条款。

## 充电器安全

- 当充电完毕或者不充电时,请及时断开充电器与设备的连接并从电源插座上拔掉充电器。
- 请勿摔落或碰撞充电器,若充电器已经损坏请勿继续使用,以免发生意外。
- 请勿用湿手触摸充电器和设备,以免发生设备短路、故障或触电。

## 电池安全

- 请勿将金属物与电池两极对接,或接触电池的端点,以免电池短路,以及因电池过热引发伤害。
- 请勿将电池暴露在高温处或发热设备的周围,电池过热可能引起爆炸。

- 请勿拆解或改装电池、插入异物或使其侵入液体物,以免引起电池漏液、过热、引起火或爆炸。
- 如果电池漏液,请勿使其接触皮肤或眼睛,如若接触了请立即用清水冲洗,并到医院进行医疗处理。
- 如果电池在使用、充电或保存过程中有变色、变形、异常发热现象,请停止使用并更换新电池。
- 请勿把电池扔到火力,否则会导致电池起火和爆炸。
- 请勿让小孩接触电池,以免发生意外。
- 请勿使用已经损坏的电池。
- 当设备的待机时间明显被正常时间短时,请更换电池。
- 请按当地规定处理电池,不可将电池作为生活垃圾处理。

# 维护和保养

- 清洁和维护本设备之前,先停止使用本设备,关闭电源,并断开于其他设备的所有连接。
- 当对讲机不使用时请将附件插孔盖盖上。
- 清洁对讲机外观的灰尘时,请使用中性洗涤剂(不能使用强腐蚀性化学药剂)进行擦拭。
- 请保持设备及其配件干燥。请勿使用微波炉或吹风机等外部加热设备对其进行干燥处理。





 
### Notes before using :

- Do not use the walkie talkie in an explosive environment (such as gas, dust, steam, etc.) or to charge the battery.
- Please turn off the walkie-talkie while refueling or parking at the gas station.
- Do not adapt or modify the machine whether there is any reason.
- Do not let the walkie talkie by prolonged direct sunlight, do not place it near a heating appliance too.
- Do not put the walkie talkie at the extremely dusty, damp and splashing place and do not place it on an unstable surface.
- The repair of the walkie talkie only can be carried out by professional technicians, do not disassemble by yourself.


#### Note :

Please read above content carefully. It is very important for walkie talkie users to gain general knowledge and understanding of risk about the use of walkie talkie.

## Radio Overview

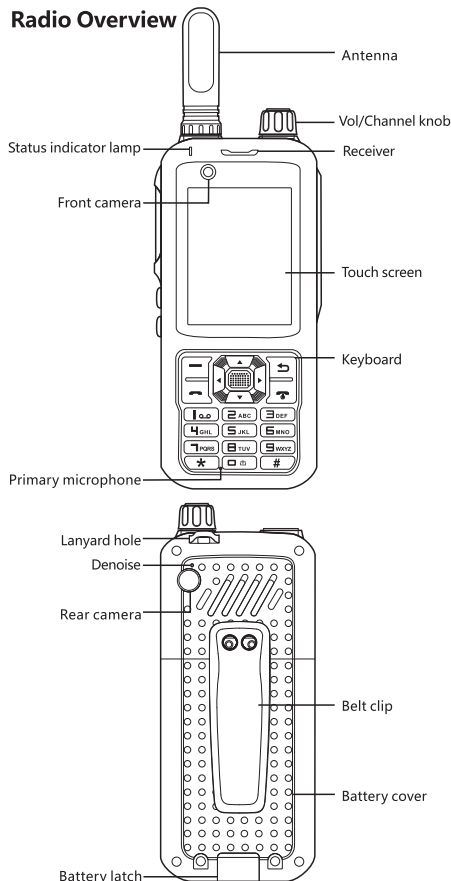


 This guide is for reference only. Commitment does not constituted any form of, and products to prevail in kind.

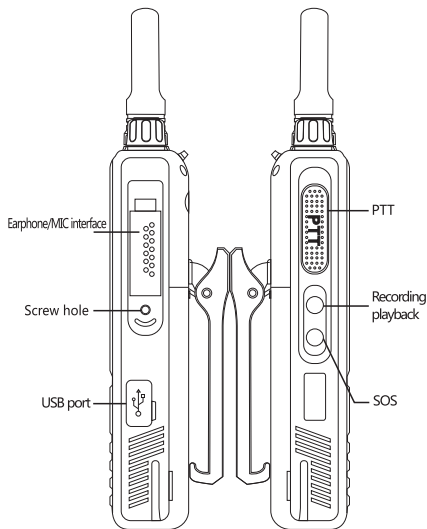


## Accessory Installation

 - 1 To insert a SIM card

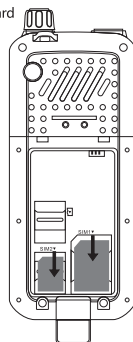


- 2 To insert a SD card

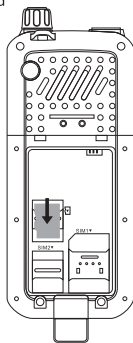 


**3 To install the battery**

 - (a) Insert the battery to connect with the metal at the bottom of the tank;
- (b) Press down on the other end of the battery.

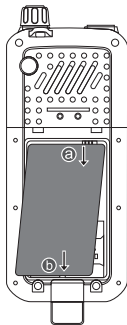


**4 Close the battery cover:**

 - (a) Push the battery cover until it clicks into place;
  - (b) Push the battery cover down;
  - (c) Press battery latch.
- Open the battery cover: pull battery latch, and then open the battery cover

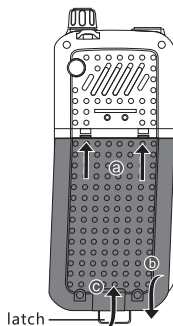


**5 Install the belt clip**

 - (a) The belt clip should be aligned with the back screw hole
  - (b) Install the belt clip by rotating screw
- Uninstall the belt clip  
Uninstall the belt clip by rotating screw until loose

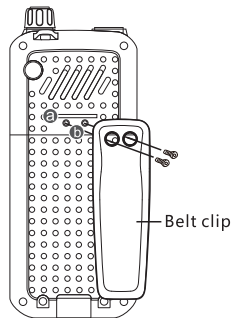


**6 Install Lanyard**

 - Install lanyard through attachment points on belt clip.

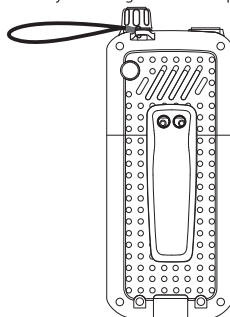

- 7 Remove hand-held mic cover: Loosen the screw by rotating, and then remove the cover.

 Install hand-held mic cover : Hand-held mic cover should be aligned with card slot, and press into the screw hole to rotate tightly.

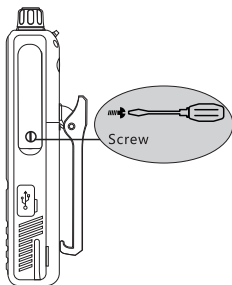


- 8 Attach/Remove the Antenna

Screw the antenna in to the connector on the top of radio by holding the antenna at its base and turn the antenna clockwise to fasten it.

Turn the antenna counter-clockwise until you can remove it.

 (Note: The antenna is neither a handle, a key ring retainer, nor a speaker/ microphone attachment point. Using the antenna in these ways may damage the antenna and degrade your transceiver's performance)

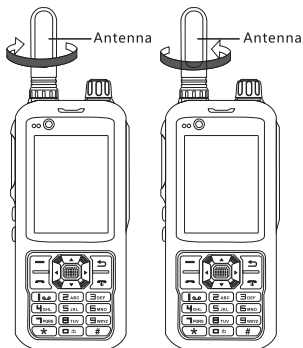

## Basic functions

### Initial start

Make sure whether the battery is well installed.

Power: Press and hold the hook key button until the boot screen appears on the display. If SIM cards have PIN code protection, please enter your PIN code. The initial password PIN code is generally 1234.

### Unlock screen

Short press the End key to lock the screen.

Short press again the power button to wake up the screen hook.

Slide to unlock icon in any direction, unlock the screen to enter the standby interface.

### System prompts

Ways to turn on the prompt bar:

Press and hold the top of the screen with a finger status bar, grabbed the pop-up drop-down box and drag down to open the prompt line. Prompted bar displays the current open applications, click on a running list of fields, you can quickly switch to the corresponding application.

Tips: When you turn on airplane mode, you can not make a call. In addition, the system prompts bar also displays the current system of notification (such as unread messages, missed calls, etc.), as well as applications running. Click on

icon to view the list of icons, click to quickly open the corresponding function.

### Personalized Settings

In the empty space of the main screen press and access personalized settings interface. In Personalization interface, you can set the wallpaper, add widgets, and system settings.

### Move and delete icons

Long press screen menu or widget icon to move or delete the corresponding icon.

### Restore the factory settings

Select "Backup & reset" in the setup menu can restore the factory settings.

**Warning:** restore factory settings on your phone will reset to its original factory state. That clearing system, applications, data and settings, including downloaded applications.

# Function introduction

## Dial

Menu option at the bottom of screen allows you to access to phone records, digital dial pad, call settings quickly.

## Contacts

Users can call friends and colleagues conveniently, send emails and messages quickly. Contacts can be added directly on the phone or synchronized from applications on the computer.


## Message

To click message icon to enter message interface, messages received will be showed on list, which can be edited, sent and deleted.

## Settings

To set radios as required, including wireless and networks, profiles, display, storage, battery information, applications, location information, security, languages, input methods, backup ,reset, account added , date and time, accessibility, printing, about mobile phone, etc.
 
## Key Description:

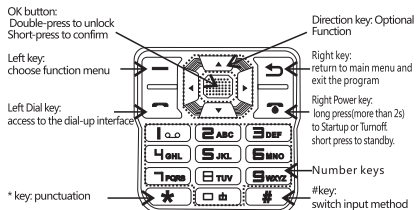

## Video

Users can watch recorded videos or video files downloaded to the radio, as well as to edit or share videos.

## Gallery

Users can browse pictures, photo, video files saved in the radio, as well as click on photo icons to enter photo interface quickly.

## File management

Files stored locally on the phone or on the memory card can be viewed and managed.

## Camera

Camera can be used to take photos or videos, and different models can be set, such as exposure control, color effect, framing mode, face detection, burst mode, etc. According to personal preference or shooting environment, related settings can be available for best shooting effect. After taking photos or videos, users can have a check.

## Calculator

Simple arithmetic operations and a variety of various mathematical operations can be carried out by calculator.

## Music

Click into the music list interface, to provide you with the artists, albums, songs and play lists four kinds of music mode selection arrangement. Click on the name of the music directly to the music player interface.

## Intercom

Enter user name / password to login

( the way of details login see remarks-public network intercom description)

## Security information

Before using the device operation, please read and observe the following precautions to ensure optimum device performance, and avoid dangerous or illegal situations.

### Electronic equipment

The place of civilization provisions that has prohibited the use of wireless devices, don't use the device, otherwise it will lead to interference from other electronic devices or other hazards.

### Area with easy firing and explosion

- Refueling point (service station) or near inflammable and explosive materials, flammable and explosive chemical agents in any area, and don't use the device, the device may cause an explosion or fire.

### Operating environment

- Don't use the device in dusty, wet, dirty, or near magnetic fields, so as to avoid internal circuit equipment failure.
- Don't use this device in a thunderstorm, thunderstorms could result in equipment malfunction or shock hazard.
- Don't place in direct sunlight for too long time.
- Please avoid equipment and accessories to rain or moisture, otherwise it may be caused a fire or electric shock.
- Don't place the device near a heat source or exposed flame sources, such as electric heaters, microwave, oven, water heater, fire, candles or other places may high temperatures.

### Accessories requirement

- Don't use unapproved or incompatible power supply, battery charger, otherwise, it may result in a fire, explosion or other hazard.
- Only use manufacturer-approved equipment and equipment accessories for this model, if you use other types of accessories, it will be lead to accidental damage to the equipment, breach of warranty of the equipment.

### The charger security

- When fully charged or not charged, please disconnect the charger from the device and unplug the charger from the power outlet.
- Don't drop or bump the charger, if the charger is damaged, don't continue to use, to avoid accidents.
- Don't touch the device and charger with wet hands to avoid short-circuiting device, malfunction or electric shock.

### Battery Safe

- Don't use the metal objects with two poles of the battery to docking, or contact with the endpoint of the battery, to avoid the battery short circuit, as well as damage caused by battery overheating.
- Don't expose the battery to high temperature or fever around the device, and battery overheating may cause an explosion.
- Don't disassemble or modify the battery, insert foreign objects or liquid intrusion, in order to avoid battery leakage, overheating, causing a fire or explosion.
- If a battery leaks, don't contact with skin or eyes. If contact, immediately rinse with water and go to hospital for medical treatment.
- If the battery is in the process of using, charging or saving, which have discoloration, deformation, abnormal heating phenomenon, please stop using and replace with new battery.
- Don't throw batteries in a fire, otherwise it will cause fire and explosion.
- Don't let children touch the battery, to avoid accidents.
- Don't use a damaged battery.  
When the standby time of the device is significantly shorter than normal, please replace the battery.
- Dispose of batteries according to local regulations, not dispose as household waste.

## Care and Cleaning

- Do not lift up antenna or an external microphone directly.
- Please use lint-free cloth to remove dust and stains from a radio to avoid poor contact.
- Please place the cover on headphone jacks when not in use.
- The keypad and sensors should be cleaned carefully with a lint-free cloth moistened with clean water and a mild washing liquid. Do not use strong corrosive solvents for cleaning.

